

## Aspire Quick Config

### Voicemail

11-07-01 Group 8 = 600  
15-03-01 All VM Ports to 0(DP) (If Aspire S  
then 1 for DTMF)  
15-03-03 All VM Ports to 1(Special)  
16-02-01 All VM Ports to Dept Grp 8  
45-01-01 8

### Trunk Termination

22-02-01 Line Type needs to DIL set to 4 for  
all trunks  
22-08-01 All Trunks to 102 after timer in 22-  
01-04  
22-01-04 Seconds it will ring at ext or grp  
before going to VM (depends on cust)  
22-07-01 DIL Incoming Trunk Destination -  
(600 for DIL VM or 301 DIL operator)

### Caller ID

14-01-22  
14-02-10  
20-09-02

### Ring Groups (If not using DIL)

22-03-01 Ringtone  
22-04-01 Assign Ring Groups to Extensions  
22-05-01 Assign Trunks to Ring Groups (102  
is voicemail)  
22-06-01 Normal Incoming Ring Group - If  
not DIL Lines - Ring or Flash on Phone

32-02-01 Doorbox Ringing Extensions

### IP Address (#'s below might vary to customer site)(Need to Reboot after changing IP Address)

10-12-01 Make IP Address 192.168.1.25  
10-12-02 Subnet Mask 255.255.255.0  
10-12-03 Gateway 192.168.1.1

### Button Programming

15-07-01  
\*01 Trunk Line  
\*05 Loop Key  
\*04 Park Key  
\*19 Call Queue Key  
\*03 Call Coverage  
01 Hotline Key  
48 Voice Over Key  
78 Record Key  
34 Barge In  
05 Headset  
77 Voicemail  
09-2 Night  
09-1 Day  
15-02-26 MSG Key to voicemail key

### Music on Hold

10-04-01 =0  
10-04-05 Music on Hold Gain  
24-01-01 Hold Recall Timer

### aming Extensions

15-01-01 type names for extensions

### Time & Date

10-01-01 Set current time & date

### old & Transfer settings

24-02-02 Ring back tone or MOH while  
transferring  
24-02-03 Fixed Call Forward  
no Answer Timer  
24-06-01 Fixed Call Forward -> Goes to 600

### DSS Console

30-02-  
30-03-

The ext that runs the DSS Console  
DSS Console Key programming

### Night Service Manual

20-07-01

### Page Internal / External

31-02-01

1 for All Call on each extension

### T1 Programming

11-02-01

In Voicemail

15-07-01

Change Ext #'s to DID

Re-Install VM to DID ext #'s

- 3 Loop Keys

- 3 Park Keys

- 1 V.O.

34-01-02

To DTMF - 1

22-02-01

Set to 3 (DID) for all Trunks

22-09-01

Amount of receive digits (3 or 4)

22-11-01,02

Conversion Table to ext #

Day - 1-100

Night - 101-200

22-11-05

No Answer for all DID's

22-11-06

102 for transfer to voicemail

22-13-02

To 2 (for night trunk group)

### Card Switches

PRI - Off Off Off On

T1 - Off Off On Off

### Intercom

Call 1 - 823 to Ring

821 to Voice Announce

### Tandem Trunking

20-11-14

Enable - for Trunk locking up  
together when hold is pressed

### Manual Page

Call 1 801- 1 or \*11

### Network Functions

Park Keys can be parked across network

Same park group

Page across network 801 # (network #, 01) 00

Hotline Keys

Trunk Access (Dial 9-dial out on networked line)

Off Premise Call forward - 20-11-12

### Toll Restriction

21-04-01

21-05-01

21-06-01